

HG60 ECONOMIC GLOSS METER



- 3.5 inch large screen with high resolution full-view display
- Display 5 sets of measurement data ,better for comparison
- Connect to PC ,more extend functions
- Super configuration of hardware,integrated multiple innovative technologies
- Automatic calibration ,convenient and quick



HG series economic gloss meter is independently developed by 3nh ,with independent intellectual property ,manufactured according to ISO2813 and GB/T 9754. HG series with characteristic of larger display screen ,supply with high-end QC software ,stable performance ,high accuracy and easy to use .

HG60 ECONOMIC GLOSS METER

Gloss measurement so easy
with one-touch to complete!



Shenzhen ThreeNH Technology Co., Ltd.


HG60 ECONOMIC GLOSS METER

PRODUCT FEATURES

- 1.60° angle for semi gloss
- 2.Concise appearance, feel good
- 3.Display 5 sets of measurement data, good for comparison
- 4.Built-in lithium ion rechargeable battery
- 5.Basic model measurement can meet basic glossiness testing requirements
- 6.Connect to PC, more extend functions
- 7.One button for all angles measurement at the same location
- 8.Comply with international standards
- 9.Stable performance, easy to read data.



APPLICABLE INDUSTRIES

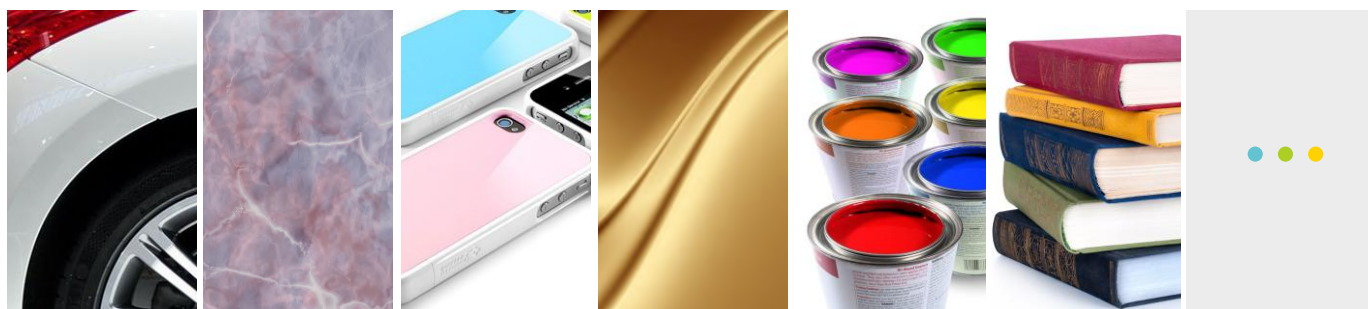

Automobile

Stonematerial

Plastic

Metal

Paints

Printing

Others

SPECIFICATION FEATURES

Model:HG60 cheap gloss meter

Measuring Angle:60°

Comply with standard: ISO 2813, GB/T 9754, ASTM D 523, ASTM D 2457

Measuring Area (mm):9x15

Measuring Range:0~300GU

Division Value:0.1GU

Measurement Range:0-10GU 10-100GU 100-300GU

Repeatability:± 0.1GU ± 0.2GU ± 0.2%GU

Reproducibility:± 0.2GU ± 0.5GU ± 0.5%GU

Measurement Standard:Conform with JJG696 first class glossmeter working requirement

Chromaticity Corresponding:Corresponding with CIE 1931(2°) under CIE C light source

Errors:±1.5 , ± 1.5%

Measuring Time: 0.5s

Dimension:L*W*H : 160mm*75mm*90mm

Weight:350g

Language:Chinese/English

Battery:3200mAh Li-ion Battery ,>10000 times(within 8 hours)

Display:TFT 3.5 inch

Interface:USB/RS-232

Storage:Basic mode: 1000

Software:GQC6 Quality Control Software with QC report printing functions and more extended functions.

Operation Temperature:0~40°C(32~104°F)

Storage Temperature:-20~50°C(-4~122°F)

Humidity:<85% relative humidity, no condensation

Standard Accessories:Power Adapter, USB cable, User Manual, GQC6 software CD (except HG60S), Calibration Plate

Optional Accessories:Miniature Printer

3nh[®]
Focus on Color

SHENZHEN ThreeNH TECHNOLOGY CO., LTD.

Address:F/6, Block 5B, Skyworth Inno Valley, Tangtou 1st Road,
Shiyan, Baoan District, Shenzhen, P.R. China

Service Hotline: 400-666-2522

Email: 3nh@3nh.com

Tel: 86-0755-26508999

Fax: 86-0755-27190609